


SB 15m

user manual (EN)

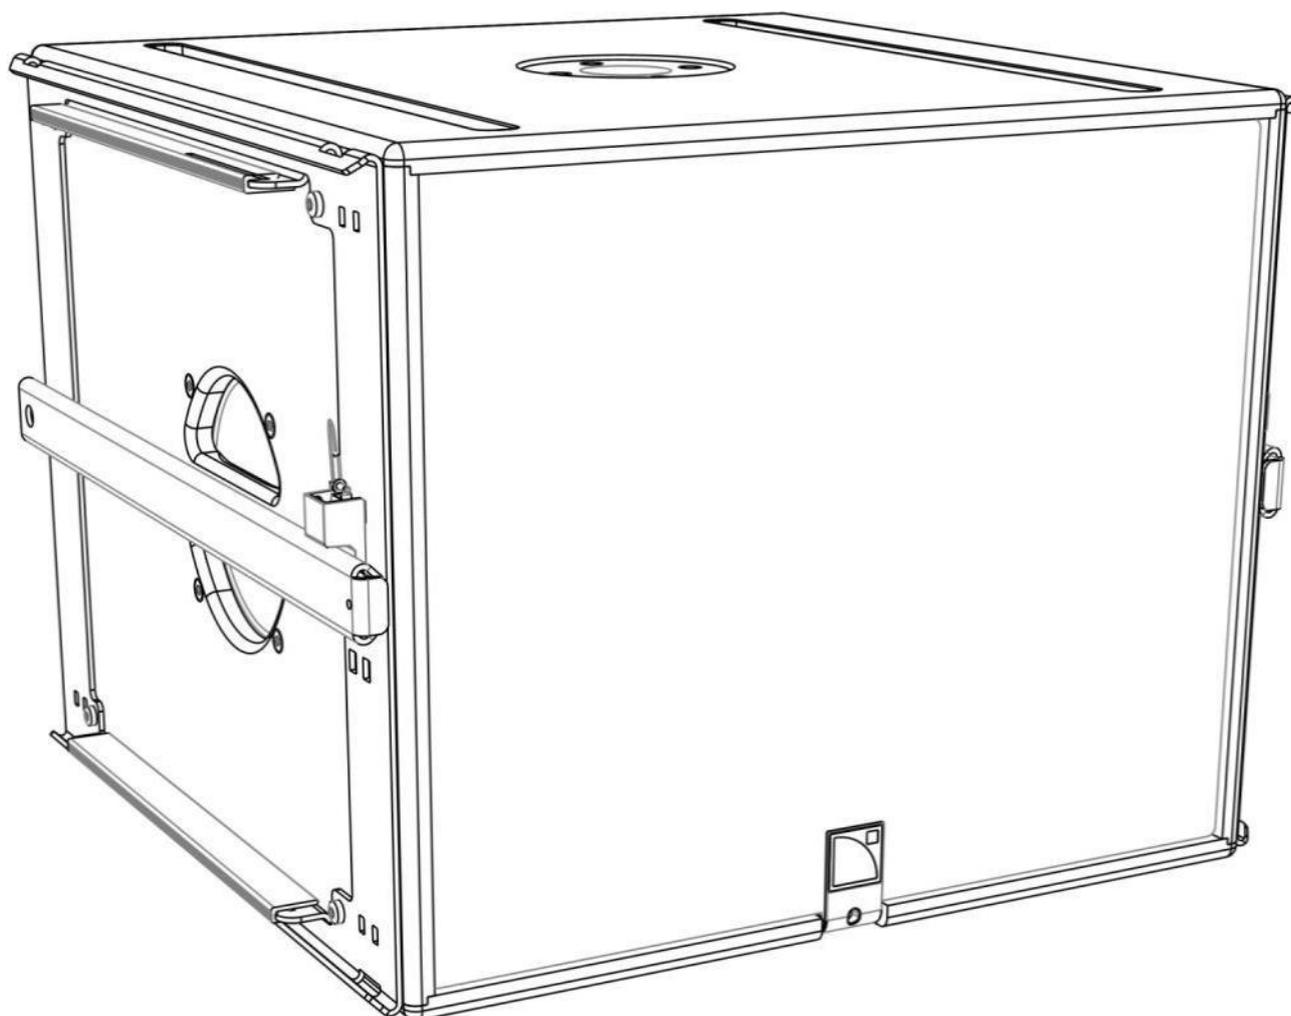

SB15m SUBWOOFER
USER MANUAL
VERSION 3.0

Document reference: SB15_UM_EN_3.0

Distribution date: March 21, 2017

© 2017 L-ACOUSTICS®. All rights reserved.

**No part of this publication may be reproduced or transmitted in any form
or by any means without the express written consent of the publisher.**

SAFETY INSTRUCTIONS

1. **Read this manual**
2. **Follow all SAFETY INSTRUCTIONS as well as DANGER and OBLIGATION warnings**
3. **Never incorporate equipment or accessories not approved by L-ACOUSTICS®**
4. **Read all the related PRODUCT INFORMATION documents before exploiting the system**
The product information document is included in the shipping carton of the related system component.
5. **Read the RIGGING MANUAL before installing the system**
Use the rigging accessories described in the rigging manual and follow the associated procedures
6. **Beware of sound levels**
Do not stay within close proximity of loudspeakers in operation and consider wearing earplugs.
Loudspeaker systems are capable of producing very high sound pressure levels (SPL) which can instantaneously lead to permanent hearing damage to performers, production crew and audience members. Hearing damage can also occur with prolonged exposure to sound: 8 h at 90 dB(A), 30 min at 110 dB(A), less than 4 min at 130 dB(A).

SYMBOLS

The following symbols are used in this document:



DANGER

This symbol indicates a potential risk of harm to an individual or damage to the product.
It can also notify the user about instructions that must be strictly followed to ensure safe installation or operation of the product.



OBLIGATION

This symbol notifies the user about instructions that must be strictly followed to ensure proper installation or operation of the product.



INFORMATION

This symbol notifies the user about complementary information or optional instructions.

WELCOME TO L-ACOUSTICS®

Thank you for choosing the L-ACOUSTICS® **SB15m subwoofer enclosure**.

This document contains essential information on using the system properly. Carefully read this document in order to become familiar with the system.

As part of a continuous evolution of techniques and standards, L-ACOUSTICS® reserves the right to change the specifications of its products and the content of its document without prior notice.

Please check the L-ACOUSTICS® web site on a regular basis to download the latest document and software updates: www.l-acoustics.com.

CONTENTS

SB15m SUBWOOFER ENCLOSURE	4
I SYSTEM COMPONENTS	5
1.1 Loudspeaker enclosure	5
1.1 Powering and driving system.....	5
1.3 Loudspeaker cables	5
1.4 Rigging element	5
1.5 Software application.....	5
2 LOUDSPEAKER CONFIGURATIONS	7
2.1 Standard configuration	7
2.2 Cardioid configuration.....	8
3 LOUDSPEAKER CONNECTION	9
3.1 Connectors	9
3.2 Connection to LA4 / LA4X	10
3.3 Connection to LA8.....	11
APPENDIX A PRESET DESCRIPTION	13
[SB15_100].....	13
[SB15_100_C].....	13
APPENDIX B RECOMMANDATION FOR SPEAKER CABLES	13
APPENDIX C SPECIFICATIONS	14

SB15m SUBWOOFER ENCLOSURE

The SB15m is the recommended subwoofer for the KIVA system and the XT coaxial series from L-ACOUSTICS®. It allows extending the system operating frequency range down to 40 Hz.

The SB15m features one direct radiating 15" speaker in a bass reflex tuned enclosure. It provides impact, sensitivity, low thermal compression and reduced distortion. The vent features a progressive profile allowing laminar airflow and reduced turbulence noise even at the highest operating levels. These combined properties contribute to the sonic qualities of the SB15m in terms of precision and musicality. The cabinet is made of first grade Baltic birch plywood to ensure maximum acoustical and mechanical integrity.

SB15m subwoofers can be flown or ground-stacked as a standalone array or within a vertical SB15m/KIVA array. A pole-mount socket is integrated into the cabinet, for the mounting of one XT enclosure or two KIVA enclosures.

The SB15m is driven and amplified by the LA4X or the LA8 controller. These ensure linearization, protection and optimization for the loudspeaker system in its different configurations, cardioid included.

1 SYSTEM COMPONENTS

The system approach developed by L-ACOUSTICS® consists in offering a global solution that guarantees the highest and most predictable level of performance at any step of loudspeaker system deployment: modeling, installation, and operation. A complete L-ACOUSTICS® system includes enclosures, amplified controllers, cables, rigging system and software applications.

1.1 Loudspeaker enclosure

SBI5m High-power subwoofer



Loudspeaker system design

Sound design aspects are beyond the scope of this document. However, the various applications of the system will be based on the loudspeaker configurations presented in this document.

1.2 Powering and driving system

LA4, LA4X Amplified controller with DSP, preset library and networking capabilities
or LA8



Operating instructions

Refer to the **LA4, LA4X or LA8 user manuals**.

1.3 Loudspeaker cables

DO cables (DO.7, DO10, DO25)	8-point PA-COM® loudspeaker cables (4 mm ² section). Respective lengths of 0.7 m/2.3 ft, 10 m/32.8 ft, and 25 m/82 ft.
DOSUB-LA8	Breakout cable for four passive enclosures. 8-point PA-COM® to 4 × 2-point SpeakON® (4 mm ² section).
SP cables (SP.7, SP5, SPI0, SP25)	4-point SpeakON® loudspeaker cables (4 mm ² section). Respective lengths of 0.7 m/2.3 ft, 5 m/16.4 ft, 10 m/32.8 ft and 25 m/82 ft.
SP-Y1	Breakout cable for two passive enclosures. 4-point SpeakON® to 2 × 2-point SpeakON® (2.5 mm ² section). Provided with CC4FP adapter.



Information about the connection of the enclosures to the LA amplifiers is given in this document. Refer to the **LA4, LA4X, LA8 and LA-RAK user manuals** for detailed instructions about the whole cabling scheme, including modulation cables and network.

1.4 Rigging element



Rigging elements or procedures are not presented in this document. Refer to the **KIVA / SBI5m or SBI5m rigging manual**.

1.5 Software application

SOUNDVISION Proprietary acoustical and mechanical 3D modeling software.

LA NETWORK MANAGER Remote control and monitoring of amplified controllers



Using L-ACOUSTICS® software

Refer to the **SOUNDVISION user manual** and the **LA NETWORK MANAGER tutorial**.

SB15m SUBWOOFER
USER MANUAL
VERSION 3.0



SB15m



LA4X



LA4



LA8



DOSUB-LA8



DO.7



DO10



DO25



SPY1



SP7



SP5



SP10



SP25



Soundvision



LA Network Manager

SB15m system components (excluding rigging elements and modulation cables)


2 LOUDSPEAKER CONFIGURATIONS

2.1 Standard configuration

The standard configuration corresponds to the use of subwoofers as single elements or as standard subwoofer arrays. In this configuration the system operates with an omni-directional directivity pattern.

The [SB15_100] preset offers a 100 Hz upper frequency limit.

The SB15m subwoofers are driven by the LA4, LA4X or LA8 amplified controllers.

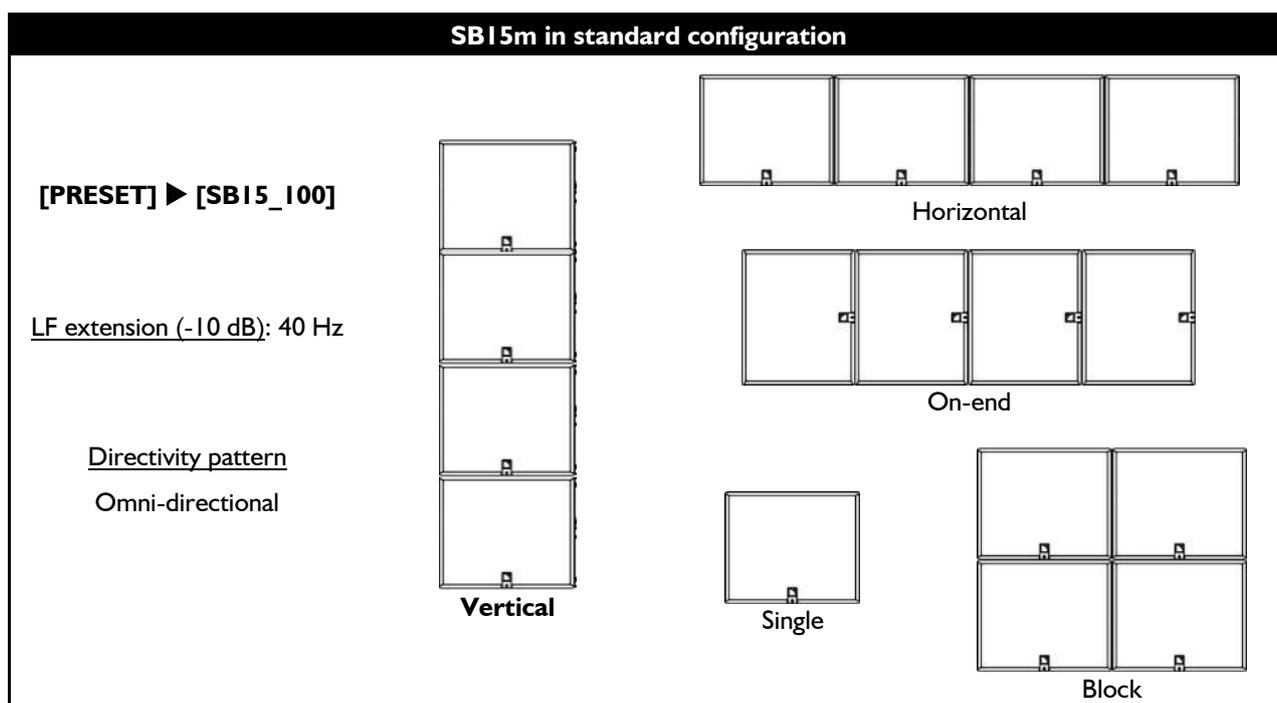

Delay settings

When combining a line source with subwoofers, delays may have to be added to the presets. Refer to the **PRESET GUIDE** to obtain the pre-alignment delay values.


Place the subwoofer enclosures side by side. If not possible, the maximum distance between two adjacent acoustic centers must be 1.7 m.

2.2 Cardioid configuration

The cardioid configuration corresponds to the use of subwoofers as cardioid subwoofer arrays. In this configuration, the system produces a rear SPL rejection.

The [SB15_100_C] preset features a 100 Hz upper frequency limit and delay settings optimized for cardioid SB15m arrays.

The SB15m subwoofers are driven by the LA4, LA4X or LA8 amplified controllers.

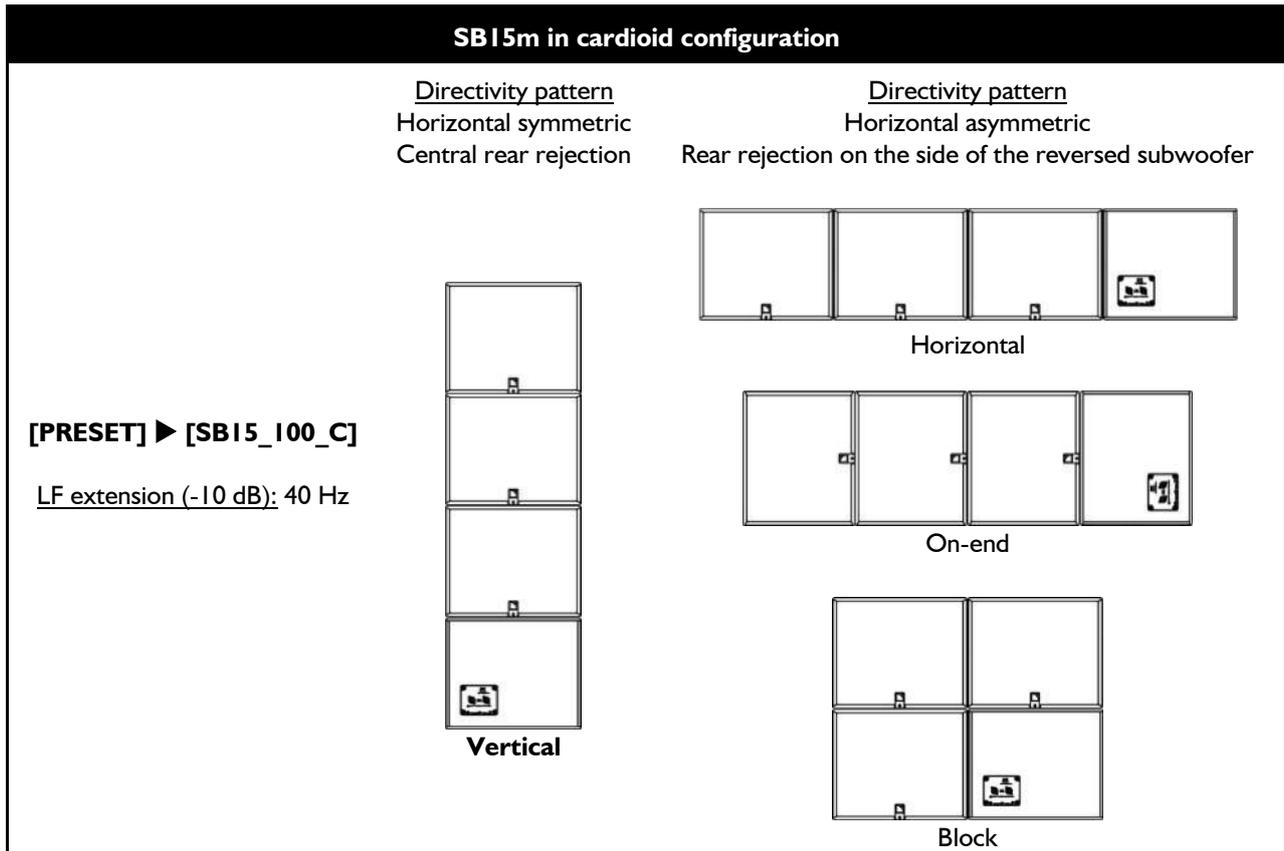

Delay settings

When combining a line source with subwoofers, delays may have to be added to the presets. Refer to the **PRESET GUIDE** to obtain the pre-alignment delay values.




OBLIGATION

Place the subwoofer enclosures side by side. If not possible, the maximum distance between two adjacent acoustic centers must be 1.7 m.

3 LOUDSPEAKER CONNECTION

3.1 Connectors

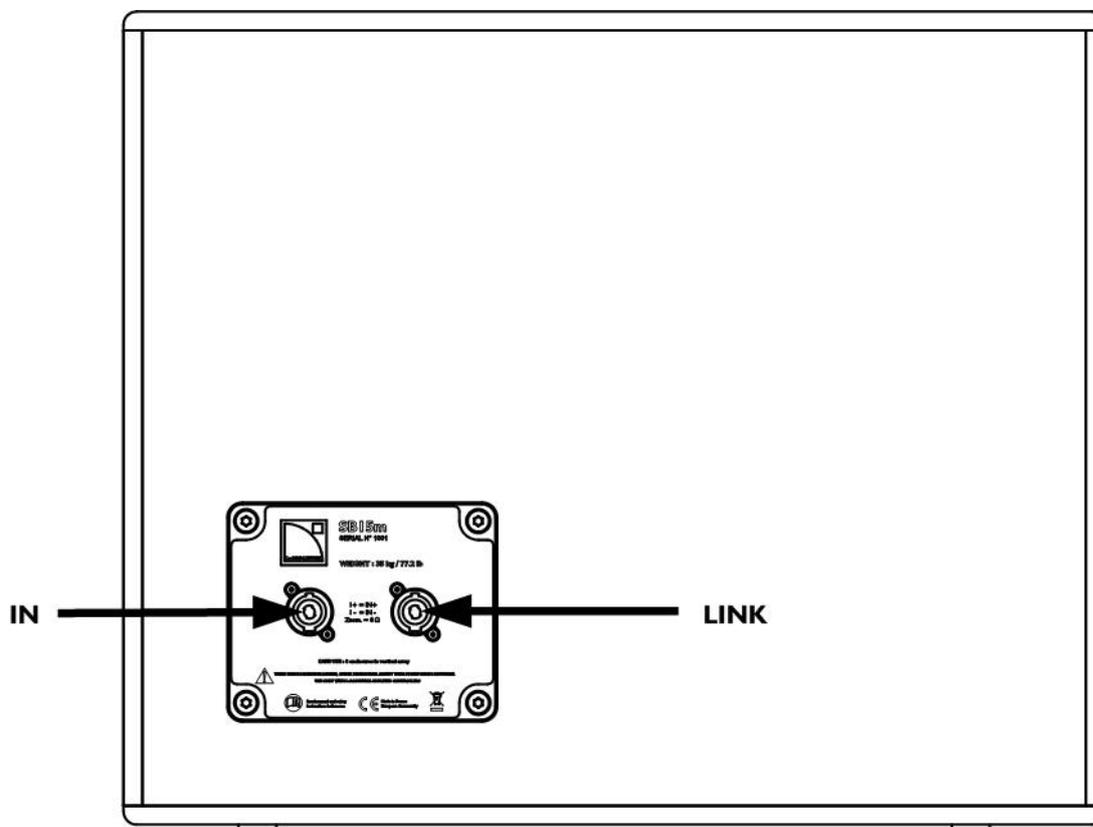

The SBI 5m subwoofer is equipped with two 4-point SpeakON® connectors.

The IN connector allows receiving the audio signal and the LINK connector allows routing it to another SBI 5m enclosure in parallel.

! The SBI 5m connection in parallel is only possible with the LA8 amplified controller.

i Internal pinout for L-ACOUSTICS® subwoofer enclosures

SpeakON® points	1 +	1 -	2 +	2 -
Transducer connectors	LF +	LF -	Not used	Not used

SB15m SUBWOOFER

USER MANUAL

VERSION 3.0

3.2 Connection to LA4 / LA4X



Maximum of 4 enclosures per LA4 / LA4X

1 SB15m can be connected to each output channel on the LA4. Therefore, a single LA4 amplified controller can drive up to 4 enclosures.



Cardioid configuration

Connect the reversed subwoofer to OUT 1 to use the cardioid preset.




Impedance load

8 Ω for 1 SB15m.

To connect the SB15m to the LA4 / LA4X, 2 options are available.

Option A


- Use **SP cables** (SP.7, SP5, SP10 or SP25) to connect one enclosure to each of the four LA4 / LA4X output channels.

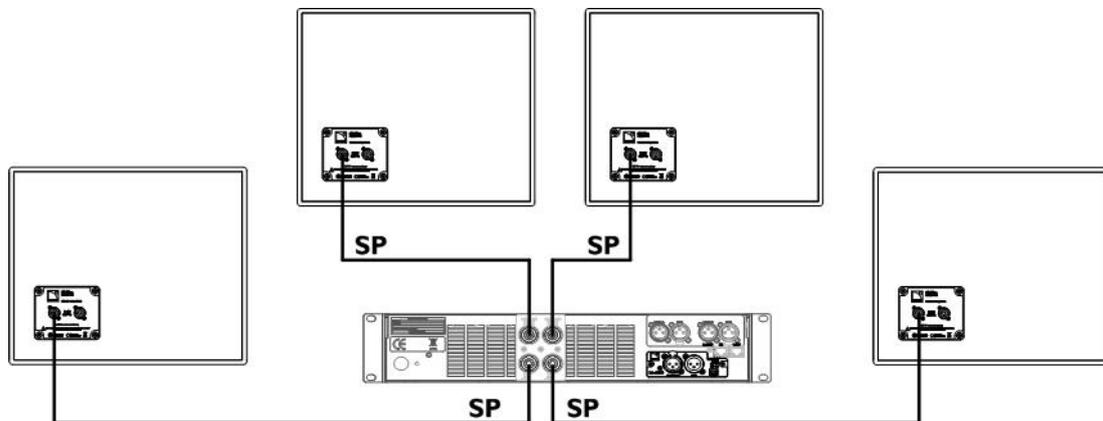

LA4 / LA4X option A maximum configuration

Option B

- Connect an **SP cable** (SP.7, SP5, SP10 or SP25) to the OUT1/OUT2 and OUT3/OUT4 connectors of the LA4 / LA4X.
- Use a **CC4FP adapter** to connect an **SP-YI cable** and separate the two output channels.
- Apply the same cabling scheme for the OUT3/OUT4 connector.

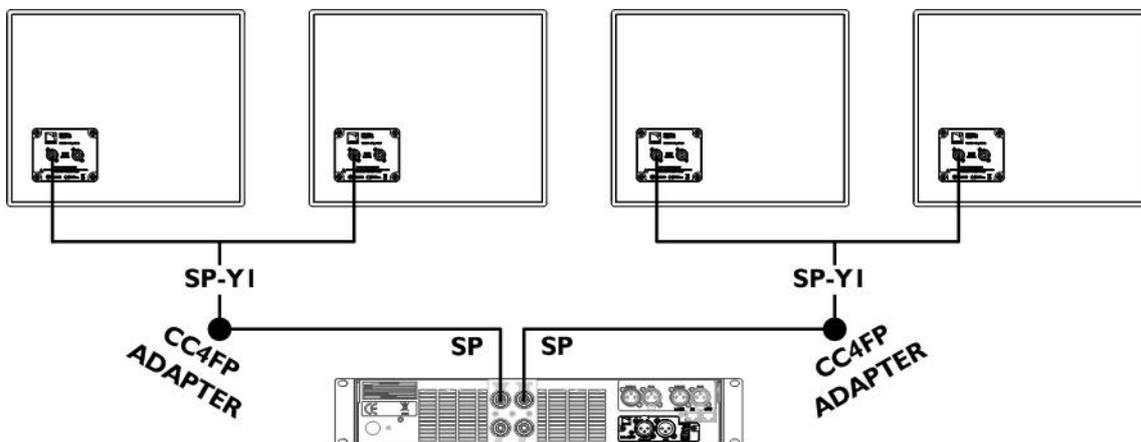

LA4 / LA4X option B maximum configuration

3.3 Connection to LA8



Maximum of 6 enclosures per LA8

LA8 can drive up to 2 SB15m per output, but no more than 6 per controller.



Cardioid configuration

Connect the reversed subwoofers to OUT 1 to use the cardioid preset.




Impedance load

8 Ω for 1 enclosure, 4 Ω for 2 enclosures.

To connect the SB15m to the LA8, 2 options are available.

Option A

- ▶ Connect a **DO cable** (DO.7, DO10 or DO25) to the LA8 PA-COM[®] connector
- ▶ Use the **DOSUB-LA8** to separate the four output channels.
- ▶ If necessary, use **SP cables** to connect additional similar enclosures in parallel with the first ones.

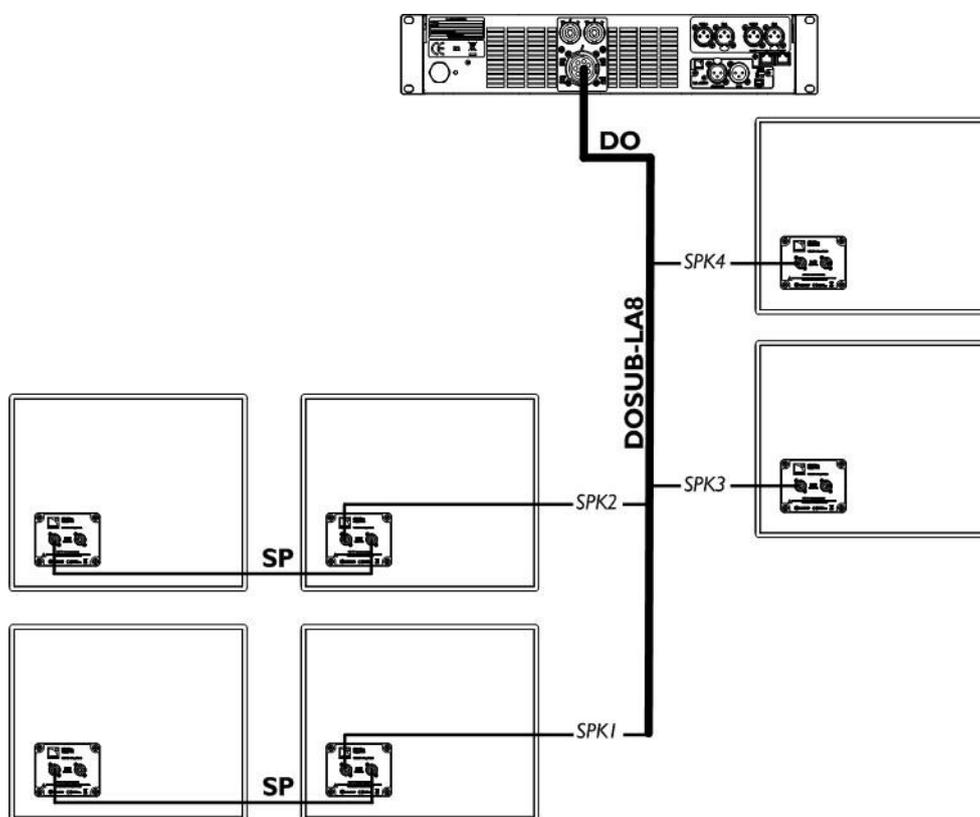

LA8 option A maximum configuration

SB 15m SUBWOOFER

USER MANUAL


VERSION 3.0

Option B



With various enclosure types connected to the same amplifier, this cabling scheme needs a custom preset.

- ▶ Connect an **SP** cable (SP.7, SP5, SP10 or SP25) to the OUT1/OUT2 and OUT3/OUT4 LA8 SpeakON® connectors.
- ▶ Use a **CC4FP adaptor** to connect an **SP-YI** cable and separate the two output channels.
- ▶ If necessary, use **SP cables** to connect additional SB 15m enclosures in parallel with the first ones.

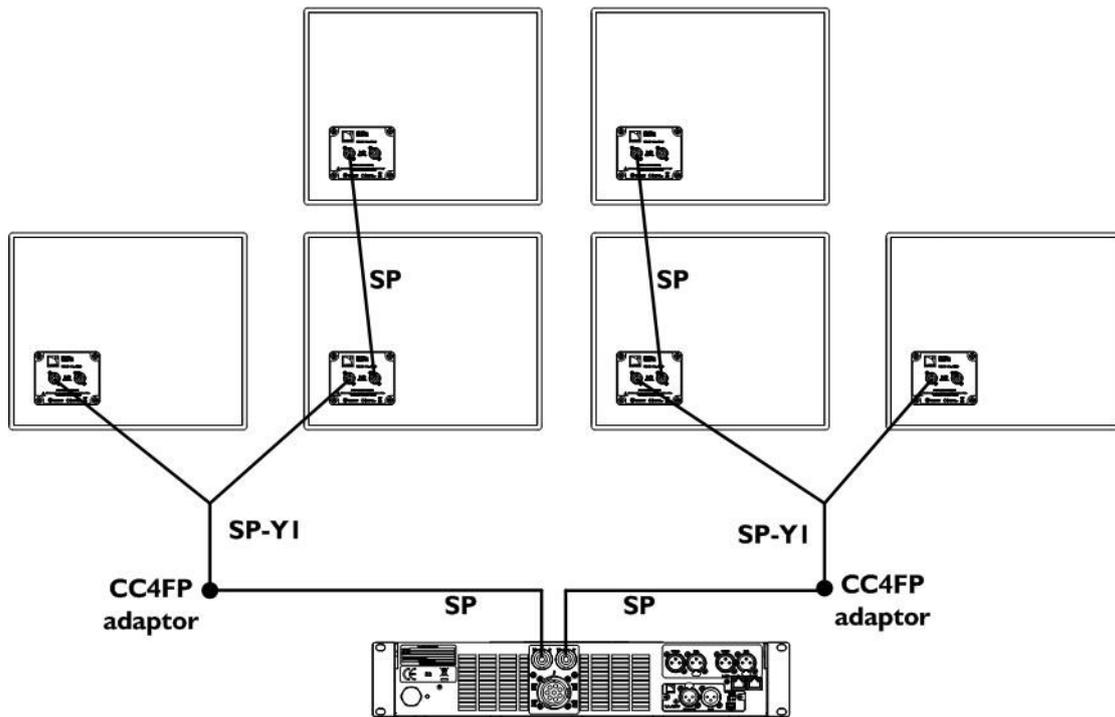

LA8 option B maximum configuration

APPENDIX A PRESET DESCRIPTION

[SB15_100]

The [SB15_100] preset provides a 100 Hz upper frequency limit for the SB15m.

It is used for SB15m subwoofers deployed as single elements or arrays in standard configuration.

Loudspeaker elements	Amplifier outputs	Channels	Default parameters				
			Routing	Gain	Delay	Polarity	Mute
SB15m	OUT 1	SB	IN A	0 dB	0 ms	+	ON
SB15m	OUT 2	SB	IN A	0 dB	0 ms	+	ON
SB15m	OUT 3	SB	IN B	0 dB	0 ms	+	ON
SB15m	OUT 4	SB	IN B	0 dB	0 ms	+	ON

[SB15_100_C]

The [SB15_100_C] preset provides a 100 Hz upper frequency limit for the SB15m.

It features optimized delay settings for subwoofers arrays deployed in cardioid configuration.

Loudspeaker elements	Amplifier outputs	Channels	Default parameters				
			Routing	Gain	Delay	Polarity	Mute
Reversed SB15m	OUT 1	SR	IN A	0 dB	0 ms	+	ON
SB15m	OUT 2	SB					ON
SB15m	OUT 3	SB					ON
SB15m	OUT 4	SB					ON

APPENDIX B RECOMMANDATION FOR SPEAKER CABLES



Cable quality and resistance

Only use high-quality fully insulated speaker cables made of stranded copper wire.

Use cables of gauge offering low resistance per unit length and keep the cables as short as possible.

The following table provides the recommended maximum length depending on the cable cross-section and on the impedance load connected to the amplifier.

Cable cross-section			Recommended maximum length					
			8 Ω load		4 Ω load		2.7 Ω load	
mm ²	SWG	AWG	m	ft	m	ft	m	ft
2.5	15	13	30	100	15	50	10	33
4	13	11	50	160	25	80	17	53
6	11	9	74	240	37	120	25	80
10	9	7	120	390	60	195	40	130

SB15m SUBWOOFER


USER MANUAL

VERSION 3.0

SPECIFICATIONS

SB15m

Description	Subwoofer enclosure, amplified by LA4X / LA8 / LA12X	
Low frequency limit (-10 dB)	40 Hz ([SB15_100] preset)	
Maximum SPL¹	137 dB ([SB15_100] preset)	
RMS power handling	600 W	
Transducer	1 × 15" weather-resistant, bass-reflex	
Nominal impedance	8 Ω	
Connectors	IN: 1 × 4-point SpeakON®	LINK: 1 × 4-point SpeakON®
Rigging components	Integrated pole-mount socket Coupling bars stored at handle position	

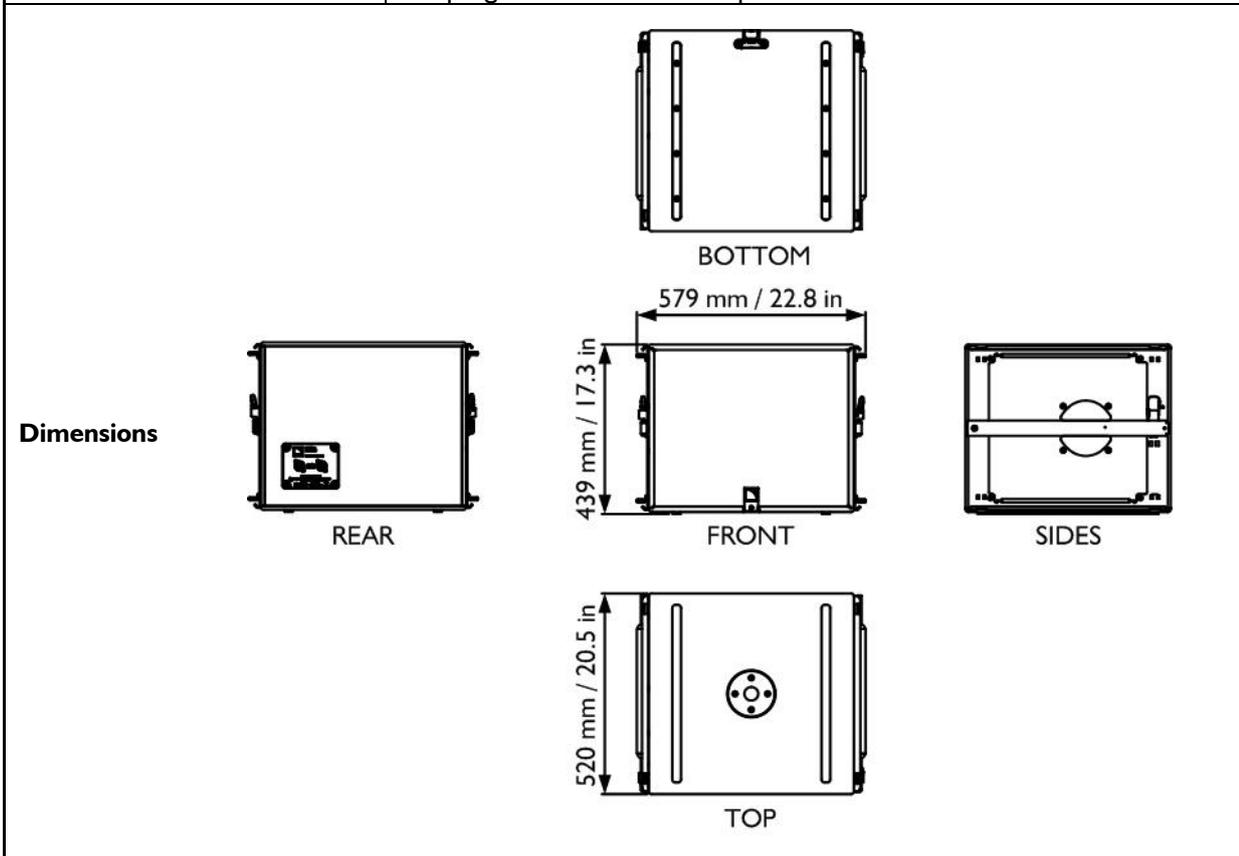

	W × H × D:	579 mm × 493 mm × 520 mm 22.8 in × 17.3 in × 20.5 in
Physical data	Weight (net):	36 kg / 79.4 lb
	Cabinet:	Baltic birch plywood
	Finish:	Dark Grey brown (Pantone 426C) Pure white (RAL 9010®) Custom RAL code on special order
	Front:	Steel grill with anti-corrosion coating Airnet® acoustically neutral fabric
	Protection Rating:	IP45
	Rigging components:	High strength steel with anti-corrosion coating

¹ Peak level measured at 1 m in half space conditions using pink noise with crest factor 4 (preset specified in brackets).



L-Acoustics, an L-Group Company

13 rue Levacher Cintrat – 91460 Marcoussis – France
+33 1 69 63 69 63 – info@l-acoustics.com
www.l-acoustics.com

L-Acoustics GmbH

Steiermärker Str. 3-5
70469 Stuttgart
Germany
+49 7 11 89660 323

L-Acoustics Ltd.

PO. Box Adler Shine - Aston House
Cornwall Avenue - London N3 1LF
United Kingdom
+44 7224 11 234

L-Acoustics Inc.

2645 Townsgate Road, Suite 600
Westlake Village, CA 91361
USA
+1 805 604 0577



L-GROUP

www.l-group.com