

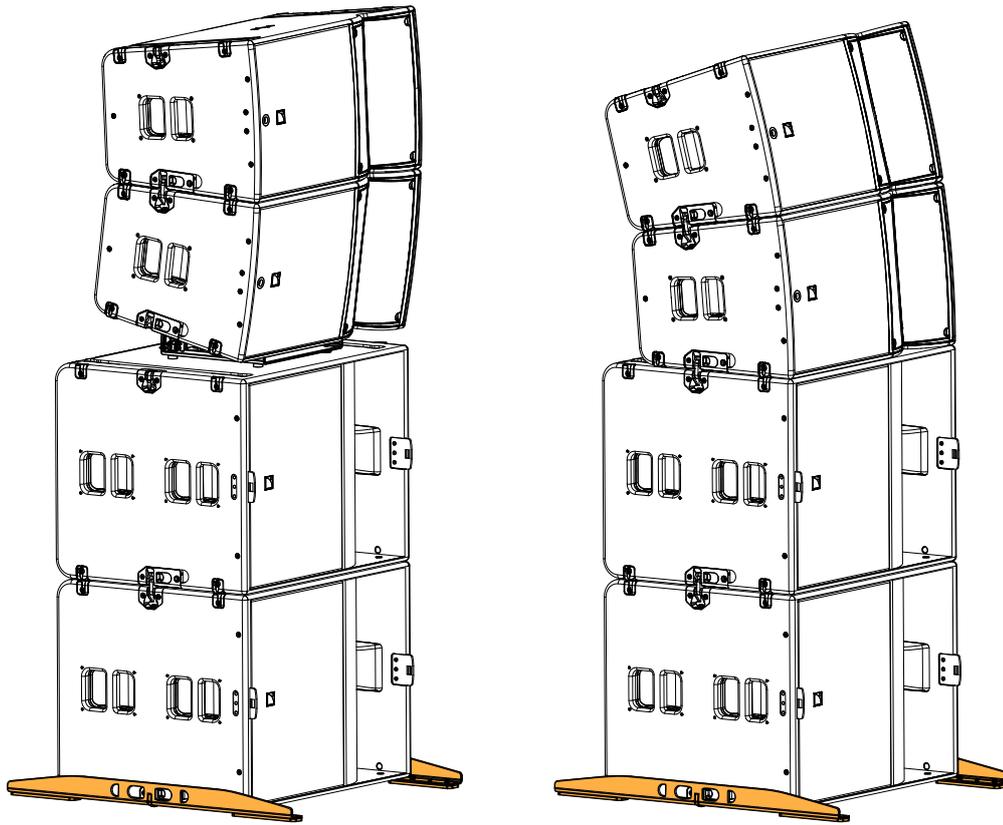


KS21-OUTRIG


KS21-OUTRIG is a set of two stability bars for KS21. Secure KS21-OUTRIG at the bottom of a KS21 array to improve the stability of the array. The use of KS21-OUTRIG is mandatory when A15 Wide/Focus are stacked on top of KS21.

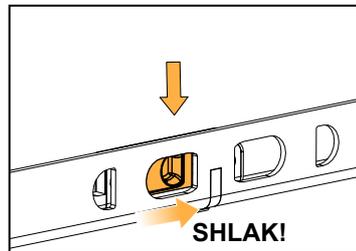

KS21-OUTRIG matches the rigging system of KS21.

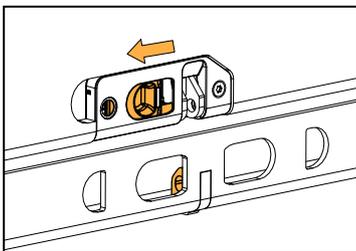

Two runners on each KS21-OUTRIG bar ensure stability. Four Ø 6.5 mm holes are available to secure the assembly to the floor.

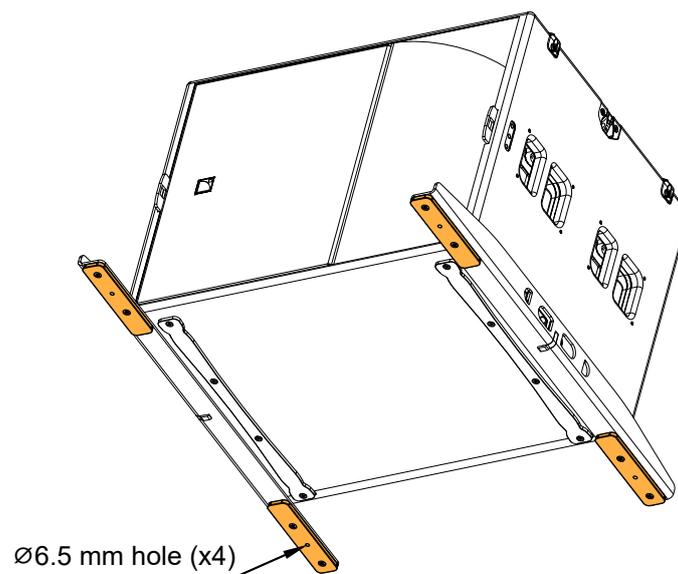

K2-JACK

K2-JACK is a set of two bars and four feet with screw jacks and hand wheels. K2-JACK can be fitted onto [KS21-CHARIOT](#) (p.40) to improve stability or correct floor discrepancies.

i During transportation, make sure the bolts are tightened.

